

# iVPX7225 RTM Quick Start Guide

P/N:6806800S36B (April 2015)

## 1 What's in the box?

Make sure you receive all items of your shipment:

- One iVPX7225 RTM
- One printed copy of *Quick Start Guide* (this document)
- One printed copy *Safety Notes Summary*
- Any other optional items ordered.



When installing or servicing the module or accessories, strictly observe the safety precautions in the *Safety Notes Summary*. Otherwise, personal injury or property damage may occur.

## 2 Observe ESD-safe measures

- Use either a properly grounded ESD wrist strap or make sure that you are working in an ESD-safe environment.
- Connect your ESD wrist strap to the ESD connector at the front or the rear of the system.

## 3 Prepare the installation site

- For information on the environmental and power requirements, see the *iVPX7225 RTM Installation and Use* manual.
- Operating temperatures refer to the temperature of the air circulating around the blade and not to the actual component temperature.

## 4 Install the RTM

1. Turn off all equipment power and then disconnect the power cable from the power source.
2. Remove the chassis cover as instructed in the equipment user's manual.
3. Remove the filler panel(s) from the appropriate card slot(s) at the rear of the chassis (if the chassis has a rear card cage).
4. Slide the top and bottom edge of the transition module into the rear guide rails of the chassis.
5. Ensure that the lever of the injector/ejector is in the outward position.
6. Slide the transition module into the chassis until resistance is felt.
7. Move the injector/ejector lever in an inward direction.
8. Verify that the transition module is properly seated and secure it to the chassis using the two screws located at the edges of the face plate.
9. Connect the appropriate cables to the transition module.



## iVPX7225 RTM-Quick Start Guide

### Finding more information

For more information on the product, see the *iVPX7225 RTM Installation and Use* and other related documentation.

Go to [www.artesyn.com/computing/support/product/technical-documentation.php](http://www.artesyn.com/computing/support/product/technical-documentation.php) for technical documentation.

### Technical Assistance

For technical assistance, visit <http://crcportal.artesyn.com/>