
ADP1440-C06 and ADP1440-D for AXP1440

Application Note

P/N: 6806800U49D

November 2019



© 2019 SMART Embedded Computing™, Inc.

All Rights Reserved.

Trademarks

The stylized "S" and "SMART" is a registered trademark of SMART Modular Technologies, Inc. and "SMART Embedded Computing" and the SMART Embedded Computing logo are trademarks of SMART Modular Technologies, Inc. All other names and logos referred to are trade names, trademarks, or registered trademarks of their respective owners. These materials are provided by SMART Embedded Computing as a service to its customers and may be used for informational purposes only.

Disclaimer*

SMART Embedded Computing (SMART EC) assumes no responsibility for errors or omissions in these materials. **These materials are provided "AS IS" without warranty of any kind, either expressed or implied, including but not limited to, the implied warranties of merchantability, fitness for a particular purpose, or non-infringement.** SMART EC further does not warrant the accuracy or completeness of the information, text, graphics, links or other items contained within these materials. SMART EC shall not be liable for any special, indirect, incidental, or consequential damages, including without limitation, lost revenues or lost profits, which may result from the use of these materials. SMART EC may make changes to these materials, or to the products described therein, at any time without notice. SMART EC makes no commitment to update the information contained within these materials.

Electronic versions of this material may be read online, downloaded for personal use, or referenced in another document as a URL to a SMART EC website. The text itself may not be published commercially in print or electronic form, edited, translated, or otherwise altered without the permission of SMART EC.

It is possible that this publication may contain reference to or information about SMART EC products, programming, or services that are not available in your country. Such references or information must not be construed to mean that SMART EC intends to announce such SMART EC products, programming, or services in your country.

Limited and Restricted Rights Legend

If the documentation contained herein is supplied, directly or indirectly, to the U.S. Government, the following notice shall apply unless otherwise agreed to in writing by SMART Embedded Computing.

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data clause at DFARS 252.227-7013 (Nov. 1995) and of the Rights in Noncommercial Computer Software and Documentation clause at DFARS 252.227-7014 (Jun. 1995).

SMART Embedded Computing, Inc.

2900 S. Diablo Way, Suite 190

Tempe, Arizona 85282

USA

*For full legal terms and conditions, visit www.smartembedded.com/ec/legal

1 Introduction

This guide provides information of the replacement of the Alarm Display Panel (ADP) in the AXP1440 (Centellis 4440) chassis. The ADP is not a defined Field Replaceable Unit (FRU) and it is a repair part only.

Note: Only qualified repair technicians should attempt to replace the ADP.

Along with the alarms and console connectors, the ADP contains the FRU data for the chassis. Replacing it will result in the loss of data (if not previously backed up). The FRU data may be backed up on the Shelf Manager. This should be performed by a skilled operator familiar with shelf management operations.

2 Backup FRU Data for the AXP1440

From the console of the Shelf Manager (SAM), use the read command to read the FRU data area of the ADP and store it in a specified file. Perform the read on both shelf managers.

The syntax is `frudatar <IPMB address> <FRU device ID> < File name>`

```
# clia frudatar 20 1 /var/nvdata/CENT4440_ShelfFruBAK.bin
```

3 Replace the ADP


CAUTION: Ensure the power is off to the AXP1440 chassis before proceeding.

CAUTION: Follow Electrostatic Discharge (ESD) and Safety Procedures. Artesyn strongly recommends that you use an antistatic wrist strap when replacing the ADP.

Electronic components can be extremely sensitive to ESD. After removing the component from its protective wrapper or from the shelf, place the component flat on a grounded, static-free surface. Do not slide the component over any surface.


Remove the two mounting screws that hold the ADP in place. Be careful while removing the screws as they are short and not captive.

Figure 1 Mounting Screws

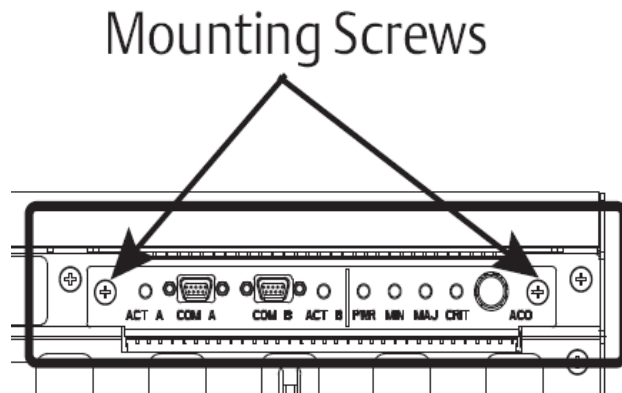

Gently pull the panel forward to expose the connector on the ribbon cable. There are levers on the sides of the connector. Push the levers to extract the ribbon cable.

Figure 2 Ribbon Cable Connector with Levers

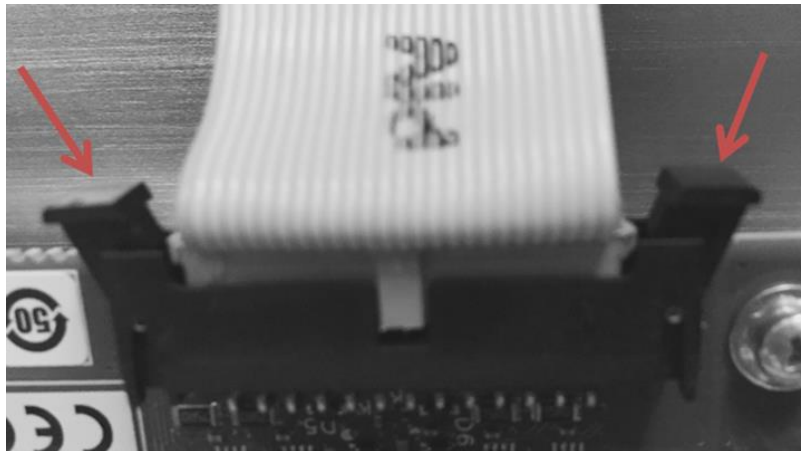

To replace the ADP, align the ribbon cable connectors and press into place. Then replace the ADP in the slot in the chassis and use the included mounting screws to fasten the ADP in place.

The chassis may now be powered up.

4 Restore FRU Data for the AXP1440

From each shelf manger's console, execute the following write commands to restore the FRU data from the backup.

The syntax is `clia frudataw <IPMB address> <FRU device ID> < File name>`

```
# clia frudataw 20 1 /var/nvdata/CENT4440_ShelfFruBAK.bin
```

```
# clia frudataw 20 2 /var/nvdata/CENT4440_ShelfFruBAK.bin
```

5 Instantiating Restored FRU Data

Power cycle the chassis or reboot both shelf managers to activate the restored FRU data. Once the system restarts, the payload boards and fan trays will transition to the active state.